FEATURES

The SK61 is a float trap dedicated to the draining of condensate in the steam lines. The SK61 has stainless steel body with threaded or flanged connections with standarized face to face dimension. This steam trap is able to drain large capacities of condensate and is well adapted to the changes of flowrates. For this reason it is recommended for the draining of process like heat exchangers, autoclaves, condensors in the field of chemical processing, food and drugs industries. As a standard the SK61 is fitted with an thermostatic capsule for air elimination in starting phase. It must be installed horizontally and several mechanisms are available depending on the differential pressure.



AVAILABLE MODELS


BSP screwed end connections: G 1/2" - G 3/4" - G 1". Connecting with flanges PN25: DN15, DN20 to DN25. $\Delta P 4,5/10/14 \text{ bar}.$



LIMITS OF USE

Max allowed fluid pressure : PS	25 Bar
Max allowed fluid temperature TS :	+0 °C / +250 °C
Use on saturated steam	16 bar / +205 °C



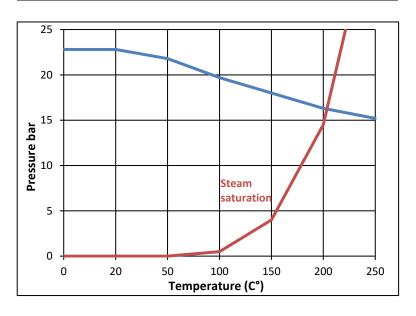

Information given as an indication only, and subject to possible modifications



SECTORIEL S.A. 45 rue du Ruisseau

38290 SAINT QUENTIN-FALLAVIER - FRANCE Tél: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email : sectoriel@sectoriel.fr


Pages	1/5
Ref.	FT1513 ENG
Rev.	03
Date	09/2023


REGULATIONS AND STANDARD OF CONSTRUCTION

Item	Standard
Prossure equipment directive 2014/69	<u>G 1/2" to G 1"</u> : A4 § 3 excluded
Pressure equipment directive 2014/68	DN 15 to 25 : A4 § 3 excluded
Materials of stainless steel	EN 1503-1
BSP theard	ISO 228
Flanges	EN 1092-1
Face to Face dimensions	EN 26554

CONSTRUCTION

N°	Item	Material		
1	Body	Stainless steel 1.4408		
2	Cover	Stainless steel 1.4408		
3	Thermostatic capsule	Stainless steel 304		
4	Capsule seat	Stainless steel 304		
5	Float seat	Stainless steel 304		
6	Ball	Stainless steel 440 C		
7	Float lever	Stainless steel 304		
8	Float	Stainless steel 304		

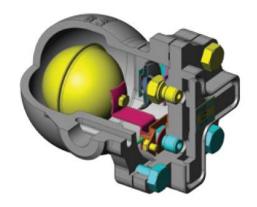

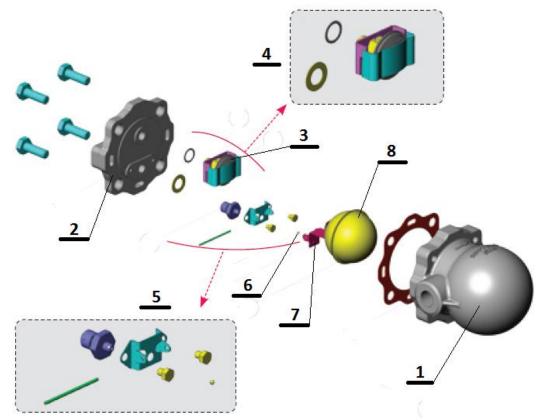

Information given as an indication only, and subject to possible modifications



SECTORIEL S.A. 45 ru 3829 Tél : www

rue du Ruisseau	Ref.	FT1513 ENG	
90 SAINT QUENTIN-FALLAVIER – FRANCE	_		
	Rev.	03	
: +33 4 74 94 90 70 - Fax : +33 4 74 94 13 95	ice.	03	
w.sectoriel.com / Email : sectoriel@sectoriel.fr	Date	09/2023	
, =	Date	03/2023	


Pages

2/5

DIMENSIONS (mm) AND WEIGHT (kg)


BSP screwed end connections


DN	Α	В	С	ØD	ØD1	L	Weight
1/2"	136,5	81,5	108	98	40	122	3,3
3/4"	136,5	81,5	108	98	40	122	3,3
1"	148,5	92,5	108	120	47	145	4,3

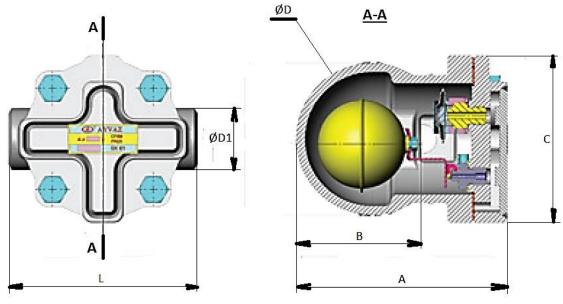

Connecting with flanges PN25

	DN	Α	В	С	ØD1	L	ØD	Øk	Øg	b	Drillings Nbr.	Weight
	15	136,5	81,5	108	98	150	95	65	46	14	4	4,5
	20	136,5	91,5	108	98	150	105	75	56	16	4	4,2
Ī	25	148,5	99,5	108	120	160	115	85	65	17	4	6,3

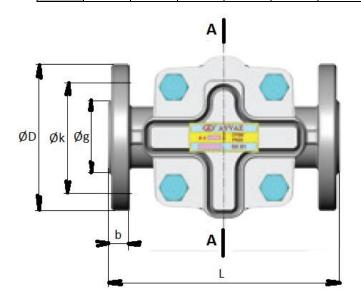

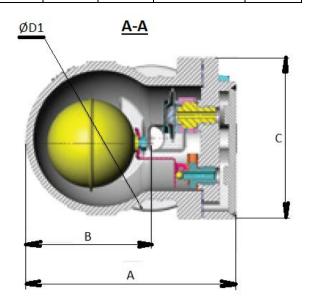


Information given as an indication only, and subject to possible modifications



SECTORIEL S.A.
45 rue du Ruisseau
38290 SAINT QUENTIN-FALLAVIER – FRANCE
Tél: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95
www.sectoriel.com / Email: sectoriel@sectoriel.fr

Pages	3/5
Ref.	FT1513 ENG
Rev.	03
Date	09/2023

FLOWRATE OF CONDENSATE (Kg/h)

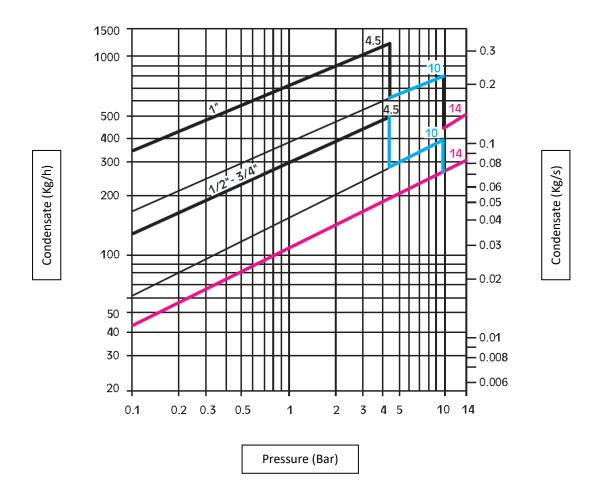

INSTALLATION

The SK61 steam trap must be installed at the lowest point of the piping to drain. As a standard, it is delivered for horizontal installation. Upsteam the trap it is recommanded to install a shut-off valve and a Y strainer to avoid any damage on the seat due to the passing of impurities. Downsteam the trap must be connected to the condensate loop or to the sewage.

Information given as an indication only, and subject to possible modifications



SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER - FRANCE

Tél: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email : sectoriel@sectoriel.fr

Pages	4/5
Ref.	FT1513 ENG
Rev.	03
Date	09/2023


MOUNTING

While installing the SK61, the right position has to be respected to allow the operation of the trap. Please respect the following two directions.

- 1 SK61 has to be installed horizontally taking care of the direction of the arrow stamped on the body : from steam pipe (upstream) to condensate pie (downstream).
- 2 Moreover the arrow written on the nameplate must be pointed to the ground.
- 3 Before installing the trap, shut of the line and remove the pressure. Wait for complete cooling of the line before any operating.
- 4 Clean carefully the upstream line.
- 5 Screw the trap on the line after having verified the direction of the two arrows.
- 6 For the flanged type, use flange's gaskets adapted to steam service.

For the bolding of flanges, use following dimensions:

Flanges PN25 Dimensions								
DN	D	К	L	Qty	ø			
15	95	65	14	4	M12			
20	105	75	14	4	M12			
25	115	85	14	4	M12			

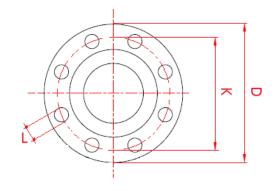

MAINTENANCE

It is not necessary to disassemble the trap from the pipe to proceed to his maintaining.

- 1 Shutt-off the upstream valve.
- 2 Drain the downstream line.
- 3 Verify that there is no pressure and temperature inside the line.
- 4 Unscrew the 4 bolts of the cover (item 2).
- 5 Verify the state of the float (item 8). Also verify the state of the lever and the seat (item 5). Clean and/or replace the damaged parts if necessary.
- 6 Verify the state of the capsule (item 4). Replace it if necessary and clean the seat.
- 7 Replace the body gasket (item 2) and re-assemble the cover.

SPART PARTS

			_	nternal mechanism	
DN (Theard)	DN (Flanges)	Body gasket	ΔΡ 4,5	ΔΡ 10	ΔΡ 14
1/2"	15	981203	981232	981233	981234
3/4"	20	981203	981232	981233	981234
1"	25	981204	981235	981236	981237

Information given as an indication only, and subject to possible modifications



SECTORIEL S.A.
45 rue du Ruisseau
38290 SAINT QUENTIN-FALLAVIER – FRANCE
Tél: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95
www.sectoriel.com / Email: sectoriel@sectoriel.fr

Pages	5/5
Ref.	FT1513 ENG
Rev.	03
Date	09/2023